

Instructions for Firmware Upgrade (Applicable for GardePro Trail Cameras)

1. Press MENU, go to "Version" menu option, check current firmware version number
2. Check the website if there is a latest firmware available for your camera model. If yes, please download it from website.
3. Copy the firmware into SD card drive
4. Insert SD card back into the camera, and make sure battery power is sufficient
5. Press and hold the MENU key
6. Move the power switch to the "SET" position
7. The camera will start the process of upgrading, it will take about 50-60 seconds.
8. After done, the camera will reboot automatically
9. Please check the "Version" in the menu settings whether it is right
10. All done, congratulation! Enjoy it!