

Instructions for Firmware Upgrading

1. Press MENU, go to "Version" menu option, check current firmware version number
2. Check the website if there is a latest firmware available for your camera model. If yes, please download it from our website
3. Copy the firmware into SD card drive (Note: the firmware is a .img file in binary format that can't be opened by applications. Just copy it or move it to SD card drive. The file type is safe with full verification.)
4. Insert SD card back into the camera, and make sure battery power is sufficient
5. Press and hold down the **MENU** key
6. Power on the camera:
 - For **E2, E2S, E5, E5S, E6, E7, E8** models, move the power switch **from "OFF" to the "ON" position**
 - For **A3, A3S, SL122M Pro** models, move the power switch **from "OFF" to the "SET" position**
7. The camera will start the process of upgrading, it will take about 50-60 seconds.
8. After done, the camera will reboot automatically
9. Please check the "Version" in the menu settings whether it is right
10. All done, congratulation! Enjoy it!
11. Especially, in case the 1296P option in "MENU > Video Quality" is invisible (which generally happened when upgrading from old v6.2.56 to latest. Ignore if it was not v6.2.56), however you want 1296P, please run "Factory Reset" in MENU after upgrading done, then go to "MENU > Video Quality" and check if 1296P is visible.